

Remote Control Overview



- 1. Power (Red Button):** NextGen TV Box OFF/ON
- 2. TV Power :** TV OFF/ON.
- 3. TV Mute:** TV MUTE.
- 4. Audio:** Select alternate audio
- 5. Closed Caption:** Closed Caption Off/On
- 6. Yellow & Green Buttons:** User defined. (Program to TV functions using the learning mode.)
- 7. Home:** Return to live TV
- 8. Guide:** Display the program guide
- 9. ▲ ▼ ◀ ▶ :** Move the cursor or field in the direction.
- 10. OK:** Select highlighted screen options.
- 11. Back:** Back to the previous page/channel.
- 12. Info:** Display program info banner
- 13. TV VOL+, TV VOL-:** TV volume Up/Down
- 14. CH+, CH-:** Channel change Up/Down
- 15. ALERT:** Emergency Alert
- 16. App:** Launch NextGen Broadcast Application (If available)
- 17. Numeric:** Enter channel number or password.
- 18. Android Settings:** Open Android Settings
- 19. Live TV Settings:** Display Menu for Scan Channels, Audio Language, Closed Caption, Parental Rating, Time Settings, UI Settings & Change PIN.

Programming the Remote Control


The remote is capable of controlling up to six basic functions of most TVs and audio devices (volume, mute, power, input). Use the instructions below for programming the six designated learning keys to operate your TV or audio device.

Learning Keys:



Programming:

1. Press and hold the black "TV POWER" button for 3 seconds until the red LED changes from flashing to solid. The solid red LED indicates the remote control is in learning mode.
 2. Once in learning mode, press and release one of the six learning keys to be programmed. The indicator light will change from solid to slow flashing.
 3. Point the front of the TV remote control at the front of the Zinwell remote (about 1~2in). Then press and hold any button on the TV remote control to be learned by the Zinwell remote. After the signal is learned, the indicator light will flash 3 times quickly then you can release the button.
 4. Press OK button of the Zinwell remote to save programming.
- ** Repeat steps 2, 3 and 4 to learn other keys in the TV area. Press OK button of the Zinwell remote to save programming.

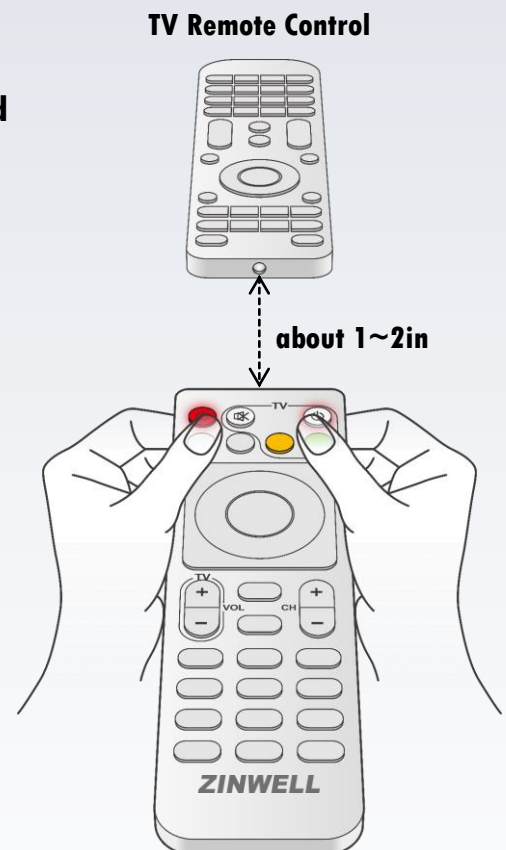

NOTE:

1. During the learning process, if you wait for more than 10 seconds at any time, it will automatically exit the learning mode.
2. During the learning process, press any button other than the six learning keys to exit the learning mode.
3. Keep the two remote controls steady when pointed at each other during the learning process.

Red LED Feedback:

1. Solid LED: Remote is in learning mode, awaiting a key to be selected for programming.
2. Slow Flashing LED: Remote is awaiting from TV remote control.
3. LED flashes 3 times: Learning is successful.